Globe valve actuator for 2-way and 3-way globe valves

- Actuating force 1000 N
- Nominal voltage AC 100...240 V
- Control Open/close, 3-point
- Stroke 20 mm



Technical	data
I ECHIHICAL	uata

Electrical data	Nominal voltage	AC 100240 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 85264 V
	Power consumption in operation	2 W
	Power consumption in rest position	1 W
	Power consumption for wire sizing	4.5 VA
	Connection supply / control	Terminals with cable 1 m, 3 x 0.75 mm <sup>2</sup> (Terminal 4 mm <sup>2</sup> )
	Parallel operation	Yes (note the performance data)
Functional data	Actuating force motor	1000 N
	Manual override	with push-button, can be locked
	Stroke	20 mm
	Running time motor	150 s / 20 mm
	Sound power level, motor	45 dB(A)
	Position indication	Mechanically, 520 mm stroke
Safety data	Protection class IEC/EN	II, reinforced insulation
	Power source UL	Class 2 Supply
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Certification UL	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1
		The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
	Mode of operation	Type 1
	Rated impulse voltage supply / control	4 kV
	Pollution degree	3
	Ambient temperature	050°C
	Storage temperature	-4080°C
	Ambient humidity	Max. 95% RH, non-condensing
	Servicing	maintenance-free
144 - 1 l		

1.1 kg

Weight Weight



#### Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
  aggressive gases interfere directly with the device and that it is ensured that the ambient
  conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of motion and so the closing point may be adjusted only
  by authorised specialists. The direction of motion is critical, particularly in connection with
  frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

#### **Product features**

**Simple direct mounting** Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. The

actuator can be rotated by 360° on the valve neck.

**Manual override** Manual override with push-button possible (the gear is disengaged for as long as the button is

pressed or remains locked).

The stroke can be adjusted by using a hexagon socket screw key (4 mm), which is inserted into

the top of the actuator. The stroke shaft extends when the key is rotated clockwise.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Combination valve/actuator Refer to the valve documentation for suitable valves, their permitted fluid temperatures and

close-off pressures.

Position indication The stroke is indicated mechanically on the bracket with tabs. The stroke range adjusts itself

automatically during operation.

**Home position** Factory setting: Actuator spindle is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in accordance

with the closing point of the valve.

**Setting direction of motion** When actuated, the stroke direction switch changes the running direction in normal operation.

**Restriction 3-point controller** It must be ensured that the pulsating 3-point controller stops when the end position is reached. If this is not possible on the system side, the multifunctional 24 V version of the actuator (..V24A-

MP-..) must be used.

### **Accessories**

Electrical accessories	Description	Туре
	Auxiliary switch 2 x SPDT add-on	S2A-H

#### **Electrical installation**




Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.

Direction of stroke switch factory setting: Actuator spindle retracted ( 🛦 ).



### Wiring diagrams




### Cable colours:

1 = blue

2 = brown

3 = white




### Cable colours:

1 = blue

2 = brown

3 = white

## **Operating controls and indicators**

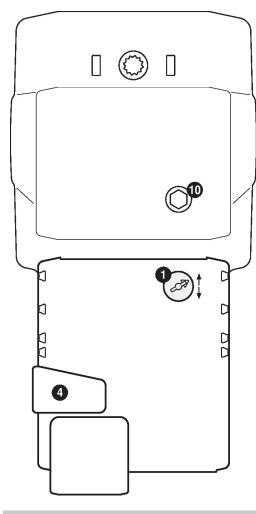

# Direction of stroke switch

Switch over: Direction of stroke changes

## 4 Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible


Release button: Gear engages, standard mode


Manual override

Clockwise: Actuator spindle extends
Counterclockwise: Actuator spindle retracts

### **Dimensions**

## **Dimensional drawings**

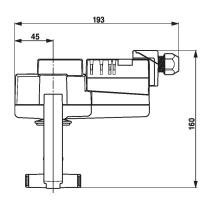

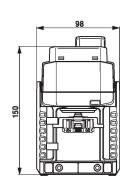



# **Further documentation**

- The complete product range for water applications
- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves
- Notes for project planning 2-way and 3-way globe valves
- General notes for project planning